COOKTOP PARTS

For Model: WLE32300
(White)

30"Electric Range
Coil Cooktop
E−Z Clean Oven

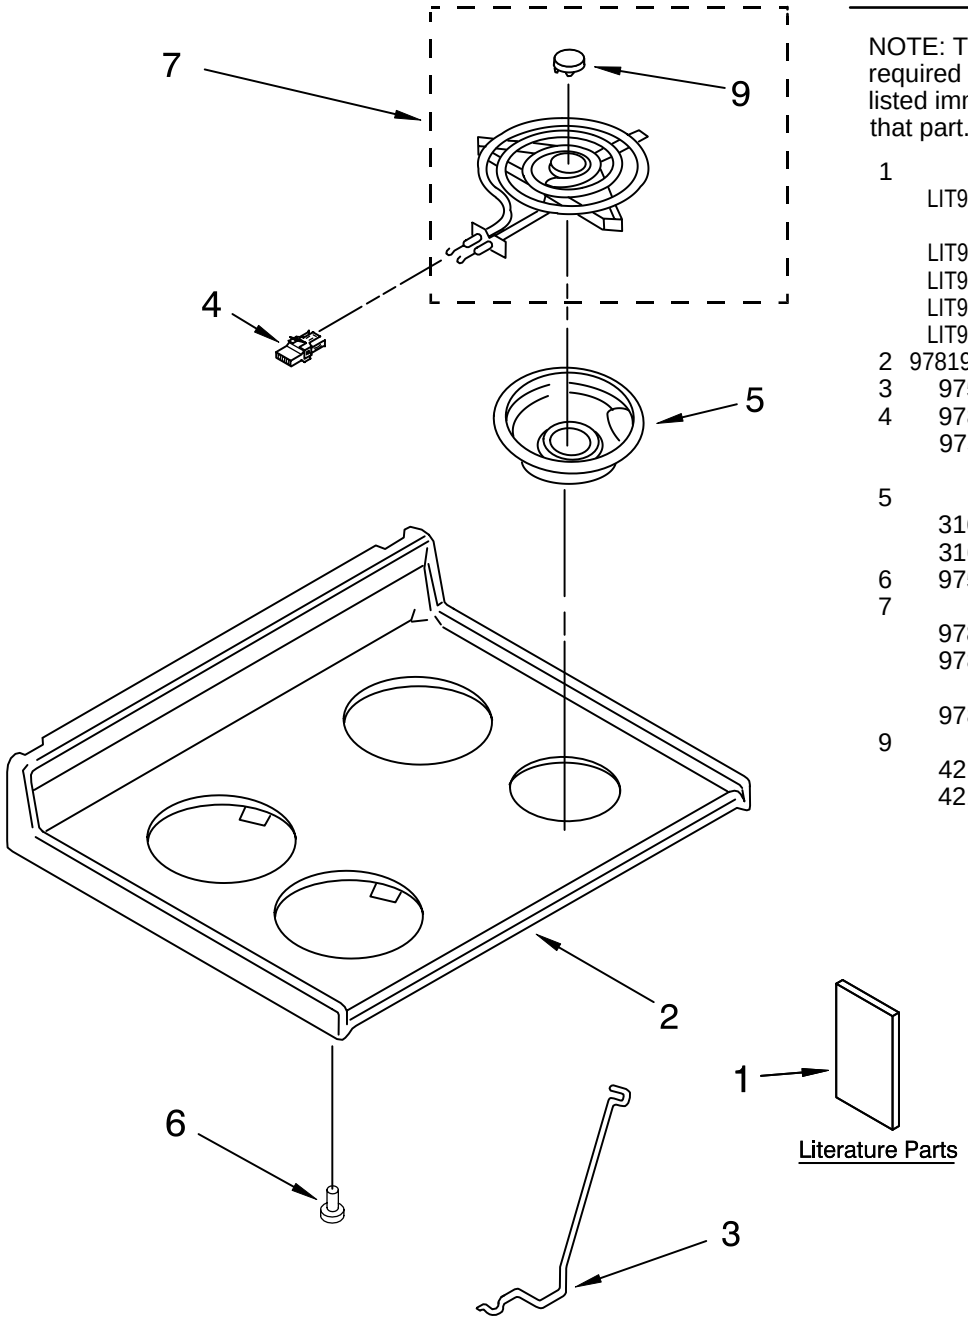

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Literature Parts
	LIT9752777	Installation Instructions
	LIT9782475	Use & Care Guide
	LIT9752767	Wiring Diagram
	LIT9752776	Template, Anti−Tip
	LIT9782477	Service Inst. CAC
2	9781989GW	Cooktop, Coil
3	9751538	Cooktop Rod (2)
4	9782013	Receptacle, Clip
	9750891	Screw, (4) 6−32 x 1/4
5		Bowl, Drip
	3169204	6"
	3169205	8"
6	9750969	Bumper (2) White
7		Element, Surface
	9782074	Coil, 6" RF
	9782075	Coil, 6" LR (Accu−Simmer)
	9782072	Coil, 8" LF−RR
9		Medallion,
	4211952	Regular, (3)
	4211986	Accu−Simmer, (1)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: WLE32300
(White)

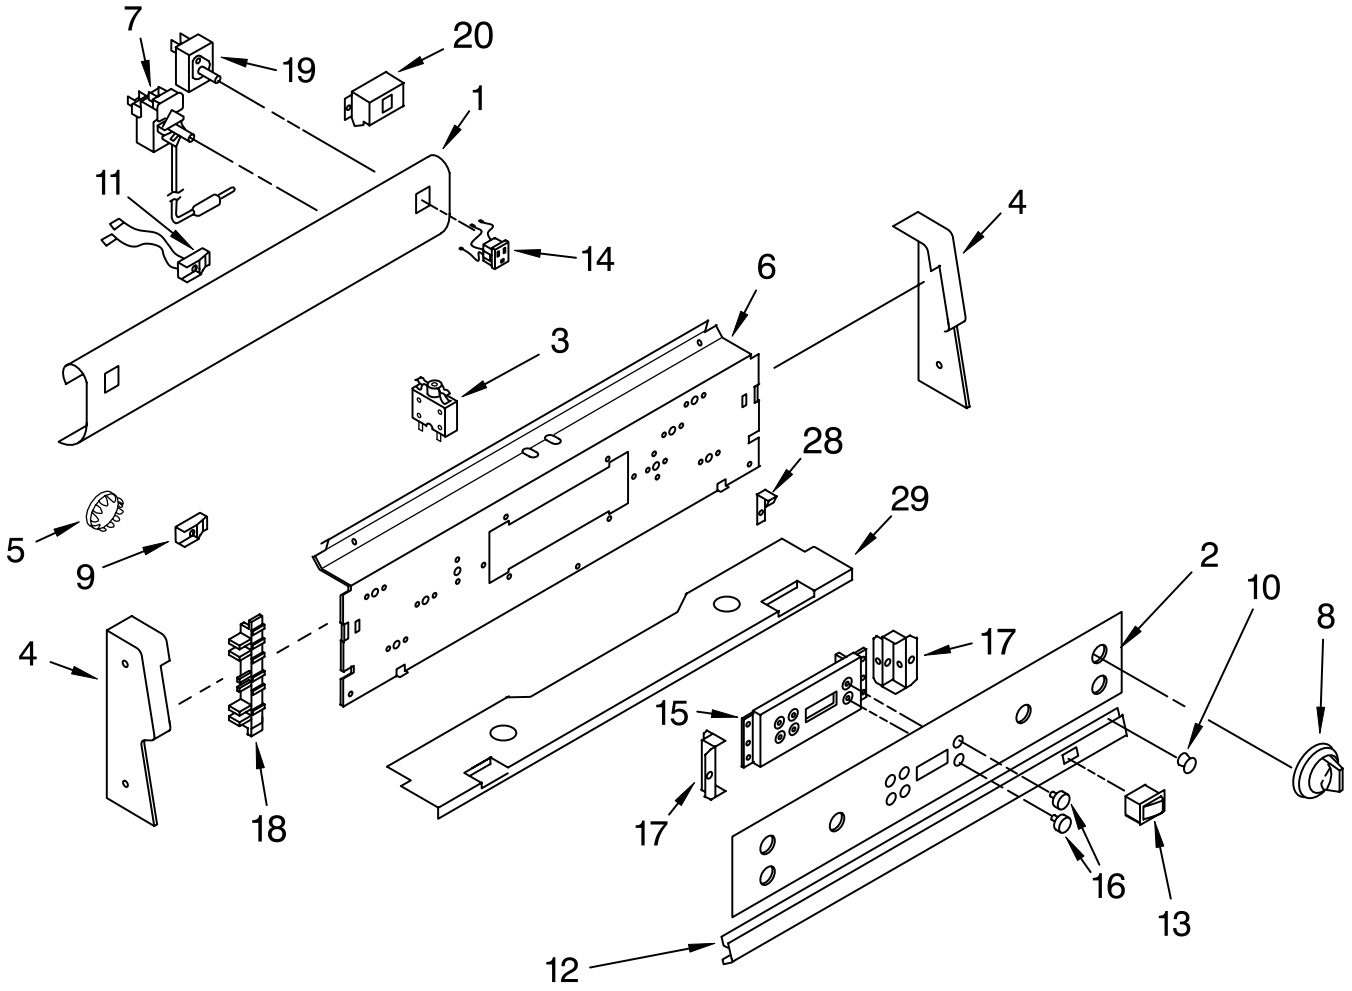

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	9755520PW	Cover, Lamp
2	9753351	Glass, Console (Control Panel)
3	3191072	Breaker, 15 Amp
4		End Cap
	9752422FW	Left
	9752423FW	Right
	9780265	Screw, (4) 10 x 3/8
5		Button Plug
	9780577	8.0 mm
	9780578	13.0mm
6	9755510	Panel, Support
	9780852	Screw, (2)
	9752854	Spacer
7	9750402	Thermostat
8	9752405FW	Knobs, Control (5)
9	313102	Light, Indicator (2) (Cooktop)
10	9752589	Lens, Ind. Light (3)
11	9780801	Light Module (Oven)
12	9752441PW	Trim Strip
13	3191100FW	Switch, Oven Light
14	9755406FW	Outlet, Untimed
15	9781714	Oven Control (Timer Assembly)
	9780265	Screw, (2) 10 x 3/8
16	9781954FW	Button, Timer (4)
17	9753304	Bracket, Timer (2)
	9780265	Screw (2)
18	9753076FW	Insert
19		Infinite Switch
	9750643	1400W (2)
	9750646	2400W (2)
	3400816	Screw (8) 8−32 x 3/16
	3400853	Screw (2)
20	9755353PW	Box, Outlet
28	9753017	Clip, Spring (2)
	9780265	Screw (2) 10−16 x 3/8
29	9752439	Base, Console
	3196168	Screw (3)
	9780265	Screw (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: WLE32300
(White)

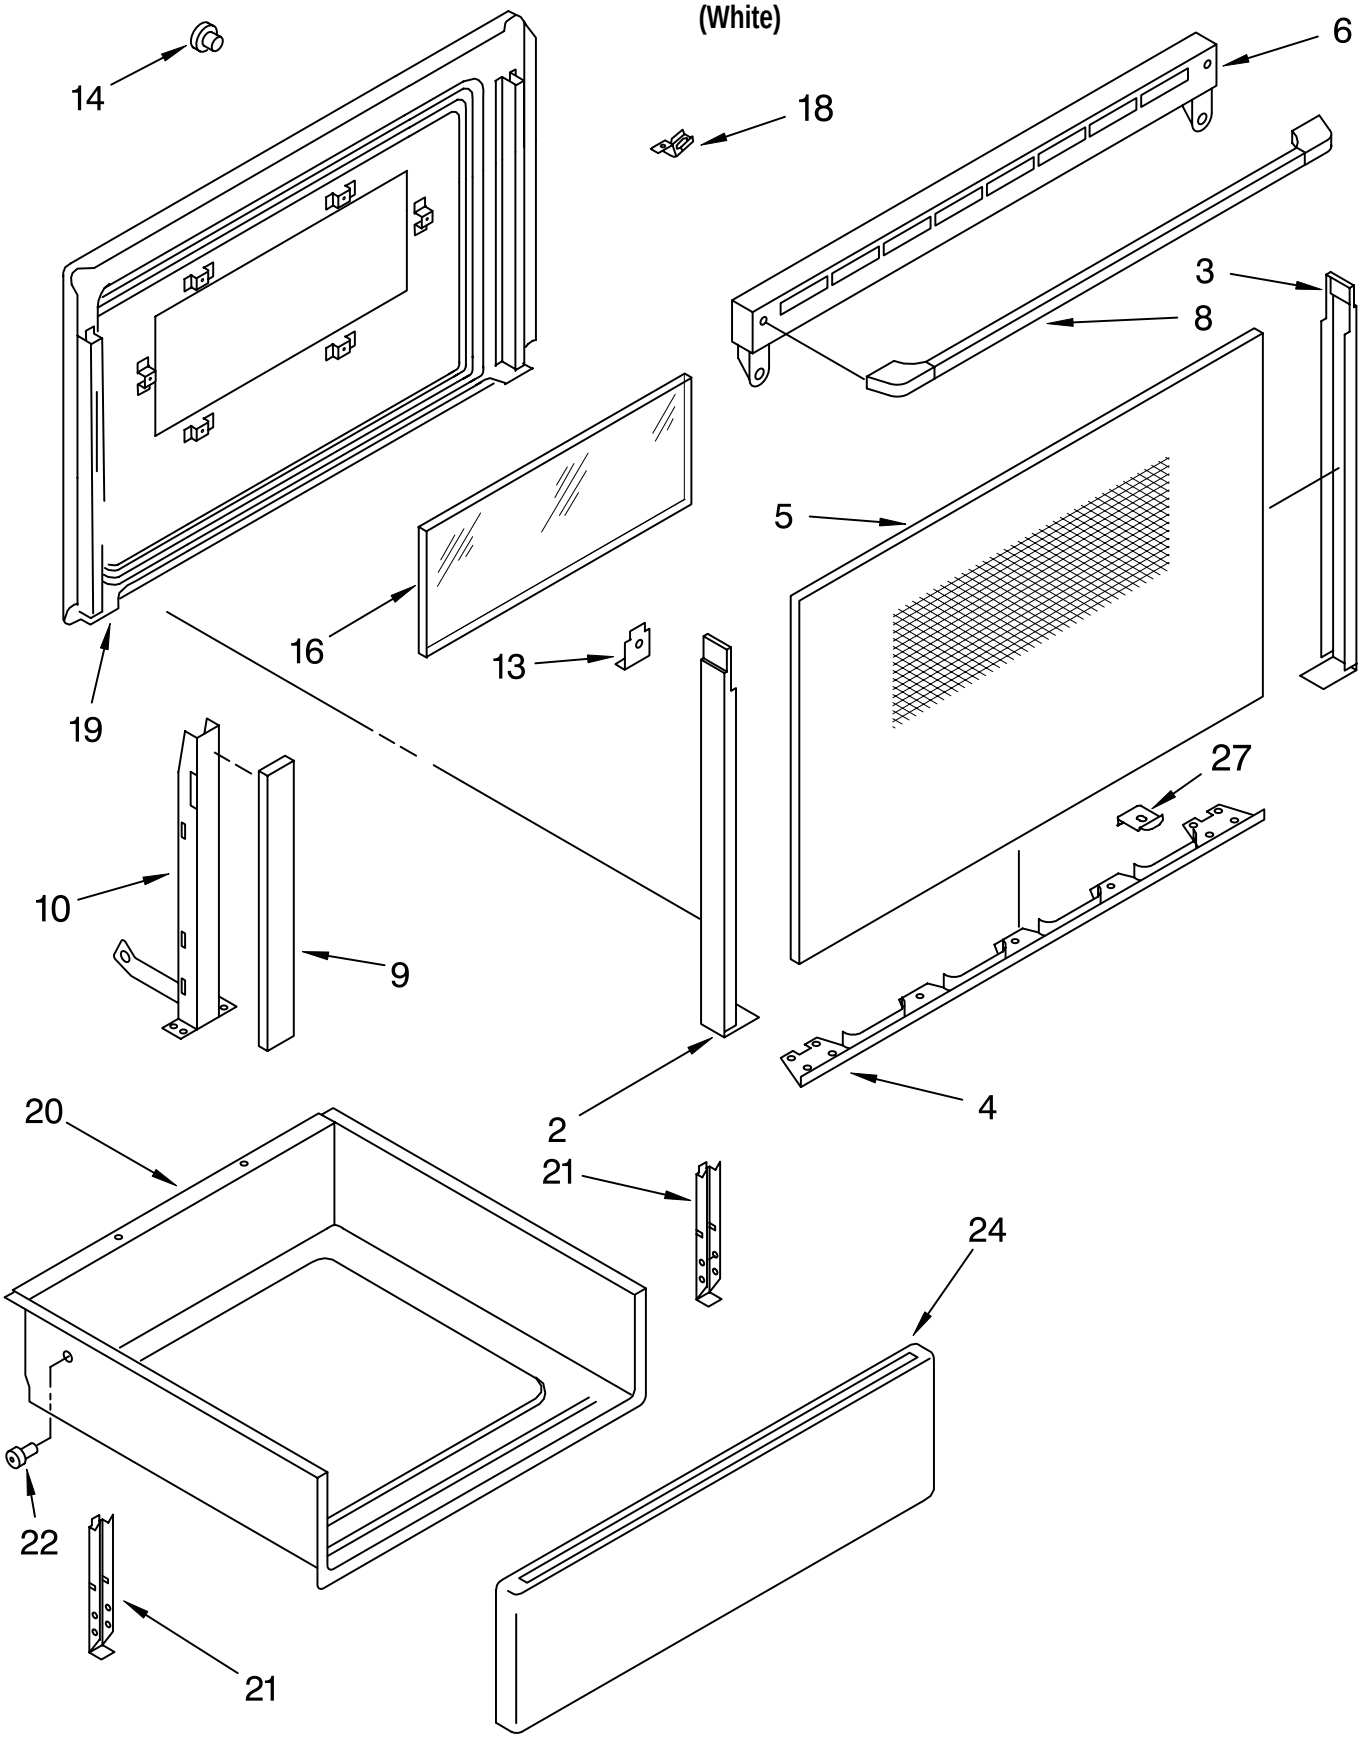

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: WLE32300
(White)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
2	9782003PW	Trim, Door−Left
3	9782004PW	Trim, Door−Right
4	9781209PW	Trim, Door Bottom
	9780265	Screw, (4) 10 x 3/8
5	9781782PW	Glass, Door Front
6	9753498GW	Vent, Door
	9780265	Screw (2)
	9781659	Gasket, Door Vent
	9781072	Screw (2)
8	9755321FW	Handle, Door
	9781072	Screw (2)
9	9781449	Gasket, Door Glass
10	9782032	Hinge, Door R or L
	9780265	Screw (4) 10 x 3/8
	90296	Clip
13	9781613	Retainer, Glass
	9780271	Screw, (2) 8 x 1/4
14	9780771	Bumper, Door
16	9781651	Glass, Clear
18	9750676	Retainer, Panel
19	9781599GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
	9780265	Screw, (2) 10 x 3/8
22	423713	Support, Roller
24	9782108PW	Front, Drawer
	9780272	Screw, (4) 10 x 1/2
27	9781502	Spacer, Door (2)

OVEN CHASSIS PARTS

For Model: WLE32300
(White)

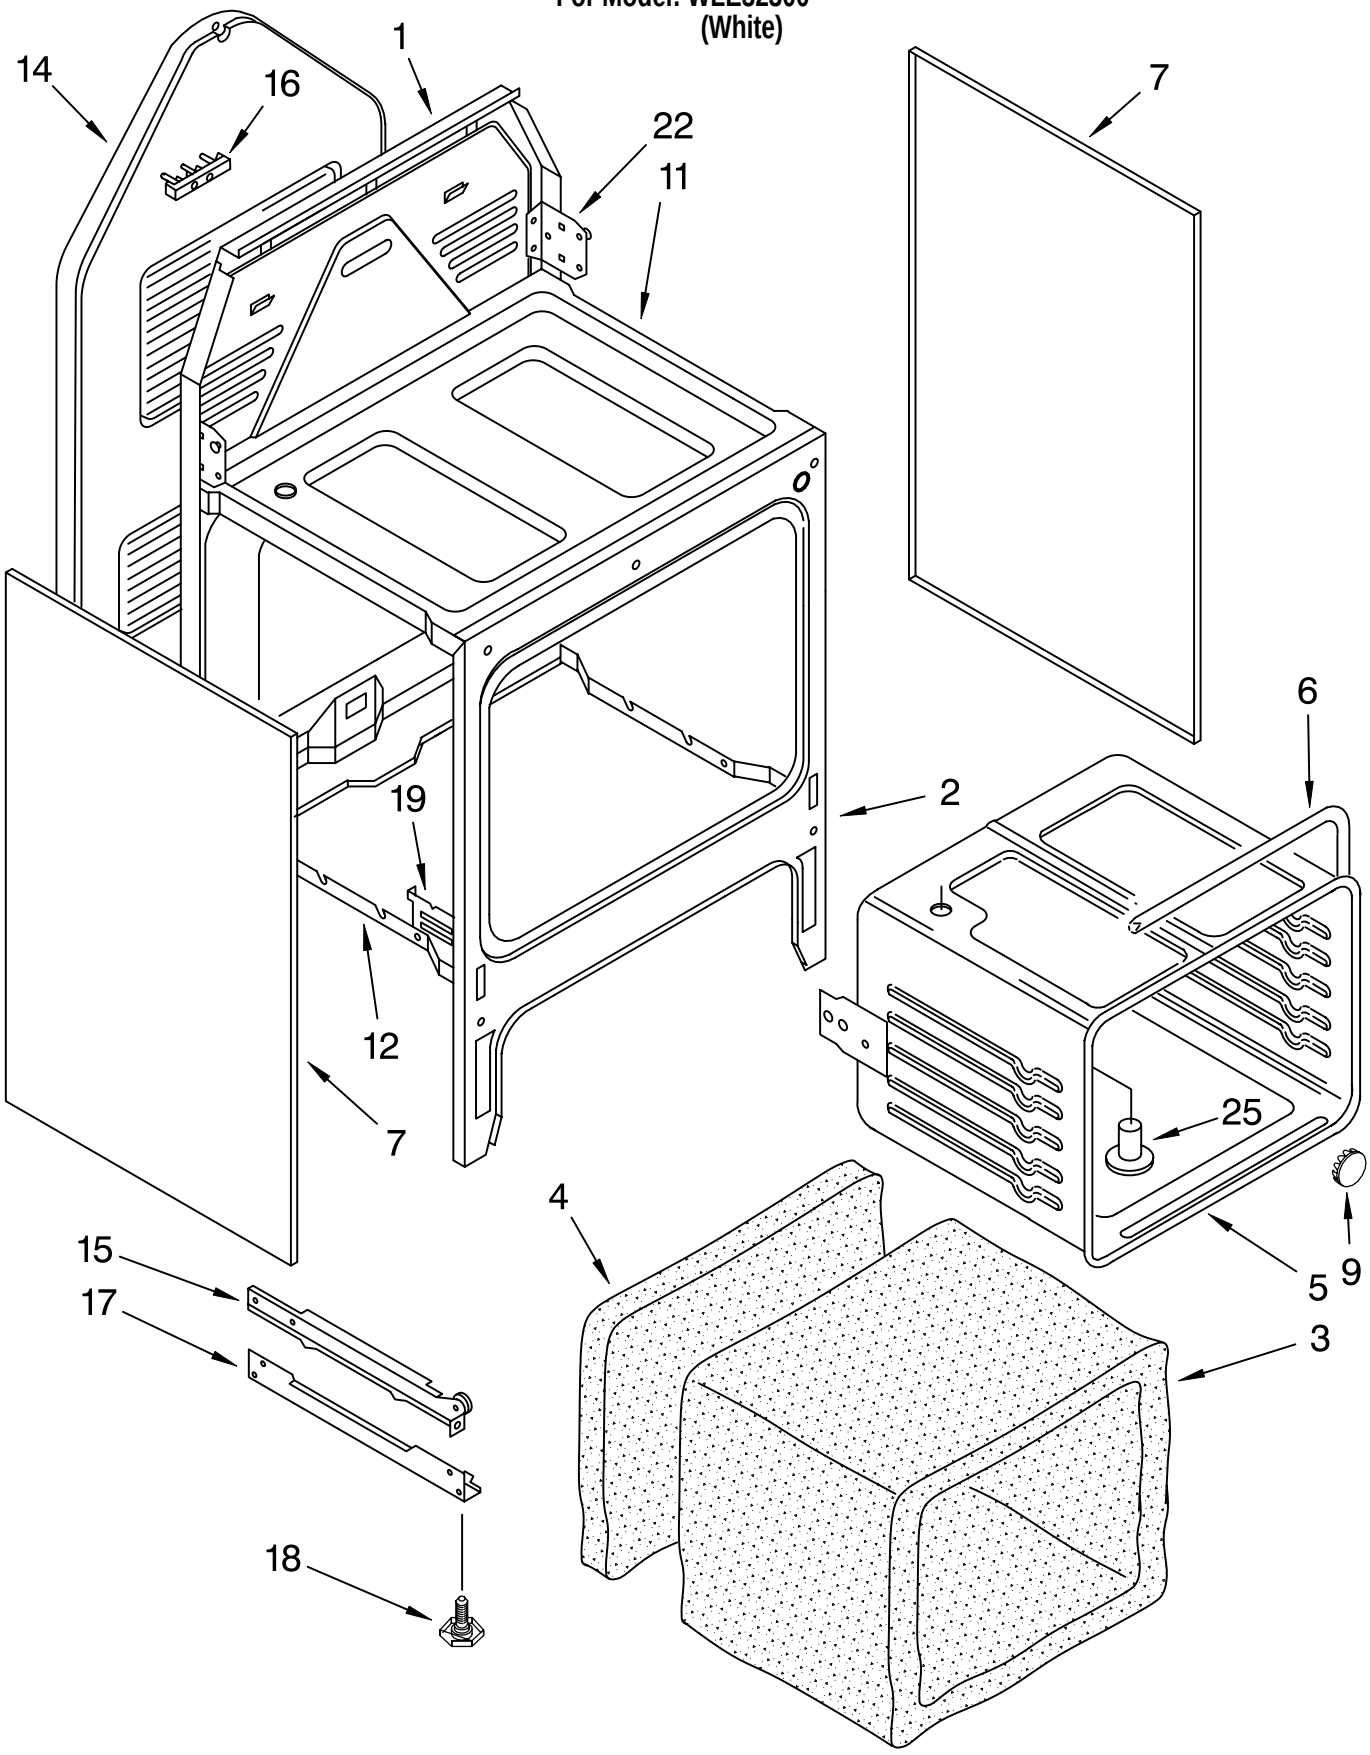

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Model: WLE32300
(White)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	9750146	Main Chassis, Back
2	9750477GM	Chassis, Front
3	9754001	Insulation, Wrap
4	9754010	Insulation, Rear
5	9781294GM	Oven Liner
6	9750691	Gasket Oven
7	9781907PW	Oven, Side Panel
	9780265	Screw (4) 10 x 3/8
	9780265	Screw (1)
9	9780578	Button, Plug
11	9750479GM	Burner Box
	9780265	Screw (7) 10 x 3/8
	9780275	Screw, (2) 8 x 3/8
	83205	Washer (3)
12	9750142	Oven Bottom
	9780265	Screw (9) 10 x 3/8
14	9750150	Panel, Rear
	423247	Screw, (3) 10 x 3/8
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
	9780265	Screw (2) 10 x 3/8
16	258076	Block, Terminal
	98884	Screw
	112432	Nut, Brass (4)
17	9750147	Bottom Rail (2)
	9780265	Screw, (8) 10 x 3/8
18	312701	Foot, (4)
19	9782005	Hinge, Receiver (R or L)
	9780265	Screw, (2) 10 x 3/8
22	9750258	Hinge, Cktp.−Left
	9750416	Hinge, Cktp.−Right
	9780265	Screw, (4) 10 x 3/8
25	9750391	Vent Tube

OVEN PARTS

For Model: WLE32300
(White)

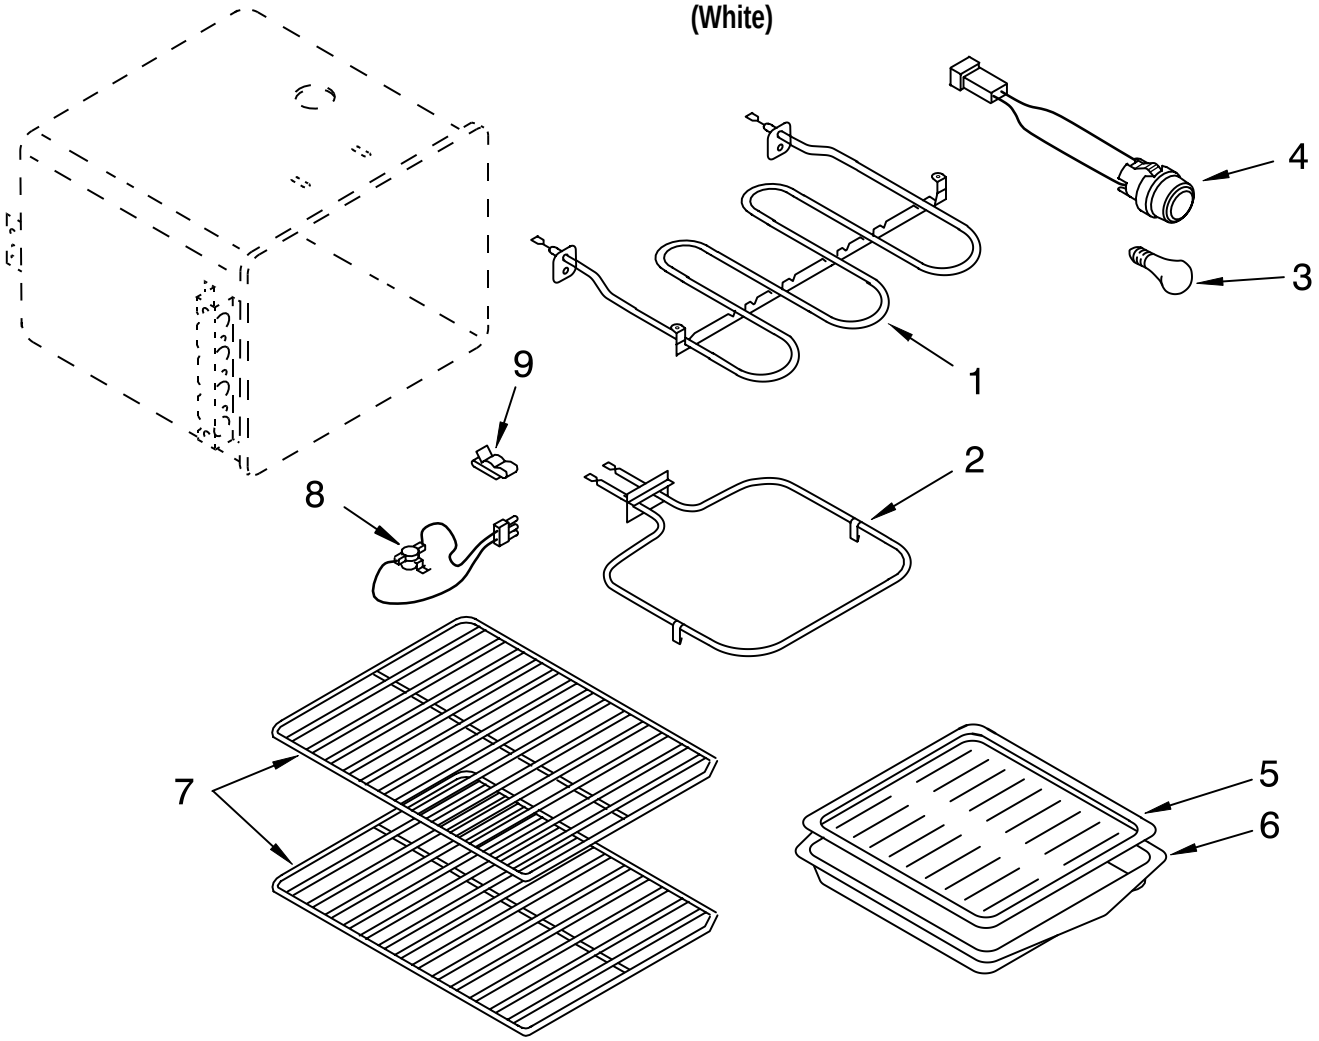

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	9780993	Element, Broil
	9781509	Screw, (2) 8 x 3/8
2	9750213	Element, Bake
	9781509	Screw, Elements 8−32 x 3/8
	340184	Screw, (2) 10 x 1−1/2
3	8935	Bulb, Oven
4	9750962	Light Assembly
5	420104GM	Grill, Broiler
6	420101GM	Pan, Broiler
7	9750498	Rack, Standard
8	3189942	Safety Therm.
	9780271	Screw, (1) 8 x 1/4
9	313382	Clip, Thermo

MISCELLANEOUS PARTS

For Model: WLE32300
(White)

Illus. No.	Part No.	DESCRIPTION
SPLICING WIRES−−25FT. LENGTH		
	242828	Wire, Black 12 Ga. 150°c
	242820	Wire, Black 14 Ga. 150°c
	242821	Wire, Blue 14 Ga. 150°c
	242822	Wire, Brown 14 Ga. 150°c
	242830	Wire, Brown 14 Ga. 200°c
	242823	Wire, Green 14 Ga. 150°c
	242824	Wire, Orange 14 Ga. 150°c
	242829	Wire, Red 12 Ga. 150°c
	242825	Wire, Red 14 Ga. 150°c
	242831	Wire, Red 14 Ga. 200°c
	242826	Wire, White 14 Ga. 150°c
	242827	Wire, Yellow 14 Ga. 150°c
	242832	Wire, Yellow 14 Ga. 200°c
PAINT, TOUCH−UP (1/2oz.)		
	72017	White
	72107	Almond
	511873	White Porcelain (2 Oz.)
PAINT, PRESSURIZED SPRAY (12 oz.)		
	350930	White
	350956	Almond
	285006	Superior Black
	206922	Primer (White)
PAINT, BULK (1 qt.)		
	799344	White (Uncut)
	978883	Almond (Uncut)
REFINISHING MATERIAL		
	799832	Kit, Porcelain Repair (White)
	242756	Touch−Up Self−Clean (1/2 Pt.)
	261582	Grease
	814009	Glass Cleaner
INSULATION		
	261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2−1/2" x 22" x 120")
	241430	Foil, Aluminum Oven (18" x 25')
WIRING HARNESS PARTS		
	9753301	Harness, Wire (Oven Thermostat)
	9753252	Harness, Wire (DCO / Analog No Auto Sw)
	9751014	Harness, Wire (Cooktop)
	9752771	Harness, Wire (Cooktop Controls)
	9755404	Power Cord
	9751003	Ground Wire
	690989	Screw, Ground
	20082084	Wire Tie
	9755473	Harness, Wire Outlet
ANTI−TIP KIT		
	9752848	Anti−Tip Kit